


Brief operating instructions

TopTronic® E control module comfort for domestic ventilation

Hoval

Responsibility for energy and environment

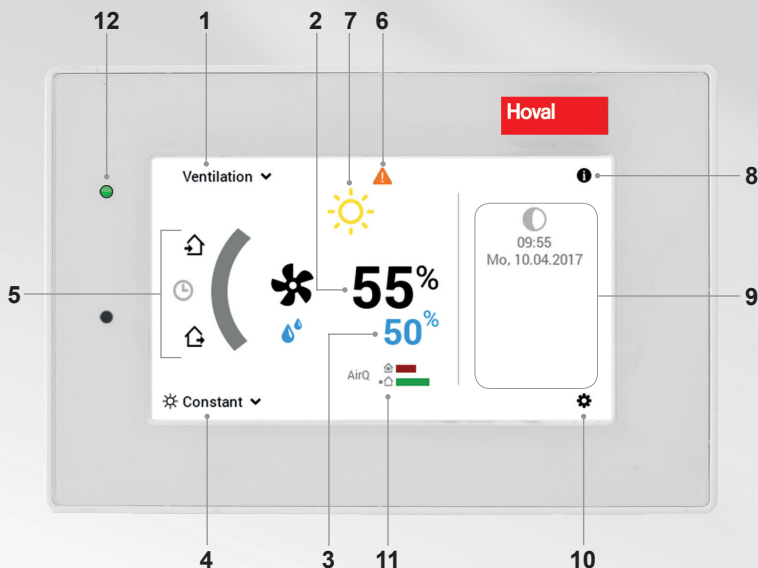


Operating elements/buttons are shown in white on a black background or in black on a white background. Display elements, on the other hand, are shown in colour.

No.	Icon	Designation/function
1	Ventilation ▾	Ventilation Selection – if there are several.
2	55%	Required air quantity Can be overridden.
3	50%	Max. air humidity
4	Constant ▾	Active basic program
5		Absent/Party The "Party" program is activated. Increases the air quantity over a desired time period.
		Week program
		Absent Reduces the air quantity over a desired time period.
6		Alarm message display Selection and display of alarm messages. Only visible in the event of an alarm.


No.	Icon	Designation/function
7		Weather display element Always displayed; only changes when connected to the Internet!
8		Information area
9	09:55 Mo, 10.04.2017	Information general Displays with different information possible.
10		Main menu Menu overview and processing of all functions (page 4).
11	AirQ	Air quality (optional) If air quality sensor(s) are installed, the interior or interior and exterior air quality is displayed. The air quality can have an impact on the air quantity.
12		LED operating status Green: operation Orange: filter change Red: lockout, see item 6

Setting the air quantity (and max. air humidity)


Tap the screen.

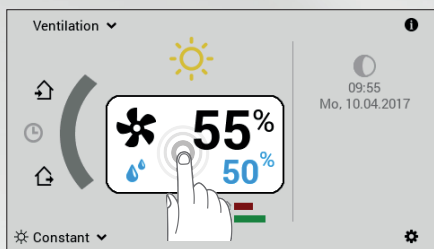

Adjust the air quantity and max. air humidity using (+/-) or by entering directly (tap the value) and confirm with OK.

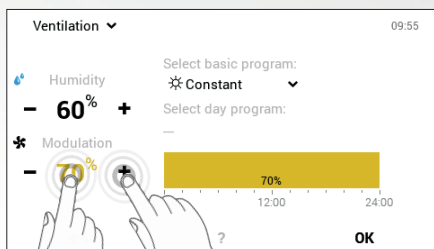


The air quantity rises/falls.

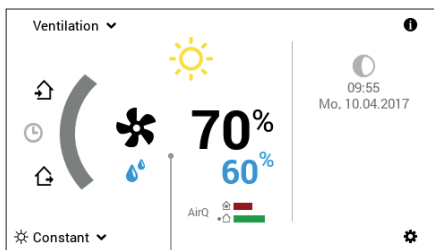


The air quantity and limit value for max. air humidity rise/fall to the required value.

Basic programs (Holiday until, Standby, Week 1, etc.)


Tap "More programs" on the display of the current program.

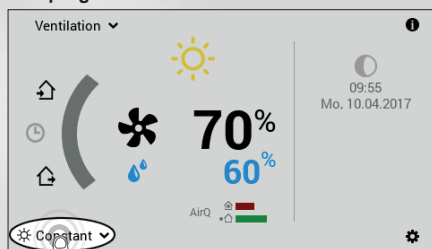

Select required basic program.

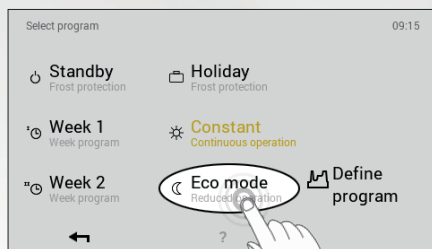


New basic program active.

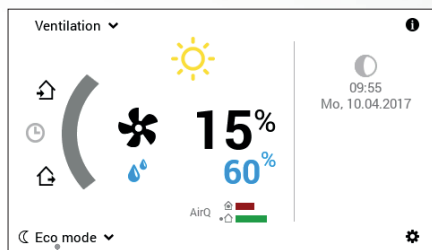


New active basic program

Absent/Party (For a few hours)


Selecting absence

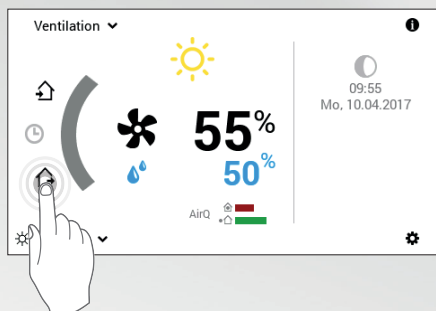

Selecting presence – Party

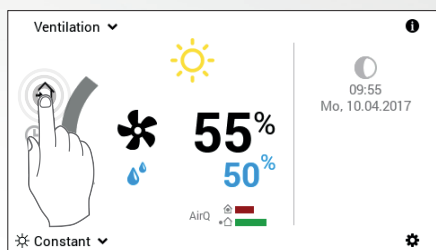

Adjust the duration and air quantity using (+/-) or by entering directly (tap the value) and confirm with OK.

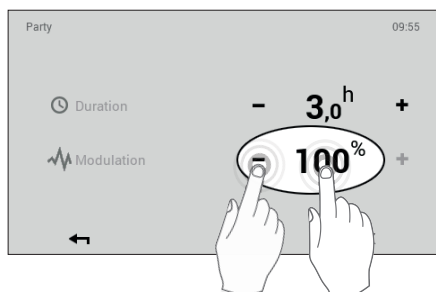

Possible occasion and function



You have guests in the evening.

- Operation with the specified air quantity until the end of the desired time period (duration)



You leave home in the afternoon and will only come back late in the evening.

- Reduced ventilation until the end of the specified time period (duration)



Notice

"Constant" basic program:

This ventilation program set ex works automatically regulates operation to the set air flow rate. If the air humidity increases over the set value, then the air quantity is increased. Built-in air quality sensors also override the required air quantity. (However, the air quantity *display* remains at the set value)

You set the individual day programs / switching cycles in the same way as the heating times, which are described in the *TopTronic® E control module comfort* and *comfort plus* instructions.

Main menu overview

- Ventilation selection -- if there are several
 - The "Party" day program is activated
 - Absent for a few hours
 - Basic program selection
- Active ventilation
- Present/Party
- Week program
- Absent
- Basic program
- Information
- Air quantity/max. air humidity
- Air quantity setting
- Air humidity setting
- Day program selection
- If installed, the interior or exterior and exterior air quality is displayed



Page 1/3

	Emission (for heating technician only)	only in combination with heating
	Analysis	Menu item can be activated
	Visualisation	Menu item not active
	Heating circuits	only in combination with heating
	Hot water	only in combination with heating
	Programs	- Adapting week programs - Adapting day programs

Page 2/3

	System	only in combination with heating
	Info	- Information area selection - Ventilation detailed selection
	User level (for heating technician only)	- User level PIN entry
	Service	For the heating technician only
	Manual operating mode (for heating technician only)	only in combination with heating
	Presentation	- Language - Colour scheme - Start screen - Backlighting - Duration until standby - Display until standby - Authorisation

Page 3/3

	Commissioning	For the heating technician only
	Update	For the heating technician only
	Power station	Menu item not active
	Ventilation	Ventilation settings