



Setting the room temperature



- Press the or button.
- The current set value and the icon 'set' are displayed.
- Change the value using the or buttons.
- The device automatically saves the change and returns to normal operating mode after 4 seconds.



The setpoint is valid in normal mode. In ECO mode, the setpoint is decreased by 5°C.

Switching on and off



- Press the button until 'ON' or 'OFF' is displayed. (If the device is switched off, all of the outputs are deactivated.)

Setting the fan speed



- Press the button.
- The current set value for the fan speed and the icon start flashing on the display.
- Change the value using the or buttons.
- The device automatically saves the change and returns to normal operating mode after 4 seconds.

Date and time setting



Parameter	Description	
Y-r	Year	2012 - 2100
M-h	Month	1 - 12
DAY	Day	1 - 31
Hr.	Time (hour)	0 - 23
	Time (minute)	0 - 59

- Press the and buttons together.
- The following screen is displayed:
- Press the button to enter the menu.
- Press the or button to select a parameter to be modified.
- Modify parameter:
 - Press the button and then press the or button to change the value.
 - Press the button to save the value.
- To exit the menu, press the button or wait for 120 s.



The device will switch between summer and winter time automatically.

Setting the air distribution



This function is only for TopVent® TH units with Air-Injector.

- Press the button.
- The icon and the current set value for the air discharge direction start flashing on the display.
- Change the value using the or buttons. The following applies:
 - 0 % ... vertical discharge direction
 - 100 % ... horizontal discharge direction
- The device automatically saves the change and returns to normal operating mode after 4 seconds.

Alarms

In case of an alarm the symbol flashes on the display.

- Press the and buttons together.
- Press the button to navigate to the alarms screen:



noAL ___ No alarm
 AL-F ___ Fan
 AL-d ___ Feedback Air-Injector
 E... ___ Room temperature sensor


Contact Hoval customer service to have faults rectified.

Week programme

Use the week programme to set operating times for normal mode (on/off depending on the room temperature setpoint) and ECO mode (with reduced setpoint -5 °C). It is possible to use up to max. 4 time zones for normal mode per day.

Normal mode (within time zones)

ECO ECO mode (outside time zones)

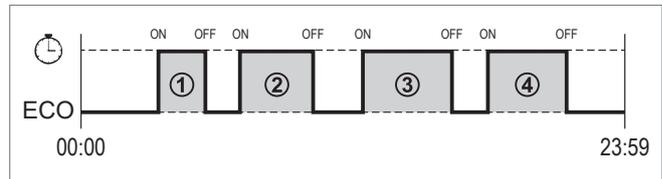

Setting time zones

- Press the and buttons together. The following screen is displayed:



- Press the button to navigate to the following screen:



- Press the button. The following screen is displayed:



with a flashing '1' for time zone 1.

- Press the or button to select the time zone to be modified (1-4).
- Press the button. The screen displays the day (Mon, Tue, Wed, Thu, Fri, Sat, Sun).
- Press the or button to select the desired day.
- Press the button. The screen displays the day, the number of the time zone and the start time (ON):



- Press the or button to select the hour and press the button to save the setting.
- Press the or button to select the minute and press the button to save the setting.
- The screen displays the day, the number of the time zone and the end time (OFF).
- Press the or button to select the hour and press the button to save the setting.
- Press the or button to select the minute and press the button to save the setting.

- Press the button to return to the zone selection menu.

- Set another time zone or press the button to exit the menu.

Copying time zones

- Press the and buttons together. The following screen is displayed:



- Press the button to navigate to the following screen:



(SOURCE : DESTINATION)

- Press the button. The source flashes.
- Press the or button to select the day to be copied.
- Press the button. The destination flashes.
- Press the or button to select the copy destination.
- Press the button.
- To exit the menu, press the button.

Parameter	Description
no	Monday
tu	Tuesday
we	Wednesday
th	Thursday
fr	Friday
sa	Saturday
su	Sunday
nf	Monday - Friday (copy destination)
ss	Saturday - Sunday (copy destination)



Factory setting: Time zone 1 from 08:00 to 17:00, daily from Monday to Friday